



THANK YOU FOR PURCHASING A YOLI INSTANT CANOPY!

Please carefully review the following instructions and familiarize yourself with parts included and how to operate your YOLI canopy. Reference parts list for names of each part noted in instructions.

YOLI PRO 100 SETUP INSTRUCTIONS

Parts Included: Fully Assembled Frame (1) Canopy Top (1) Carry Bag (1) Stakes (4)

SECURING THE CANOPY TOP TO THE FRAME

- 1 Place the canopy frame in the desired location (**Fig. 1A**). With partner, stand opposite side of the frame and hold the outer legs.
- 2 While holding the legs lift slightly off the ground taking a few steps backwards to extend frame at full arm's length as shown (**Fig. 2A**)
- 3 Unfold the canopy top and place it over the open frame (**Fig. 3A**). Locate in the center of the eaves frame where it forms a diamond shape a large slotted fastener as pictured in (**Fig. 3B**). Remove the fastener using a coin or screw driver (if needed). Pull the canopy top over the eaves where the canopy grommet meets the screw head as pictured in (**Fig. 3C**). Tighten the large slotted fastener to the screw head to secure the canopy top as pictured in (**Fig. 3D**)
- 4 Secure each corner by attaching the corner of the canopy top to the black fastening strip (**Fig. 4A**). Pull all 4 corners down until completely over black fastening strip. Your canopy top is now secured to the frame.

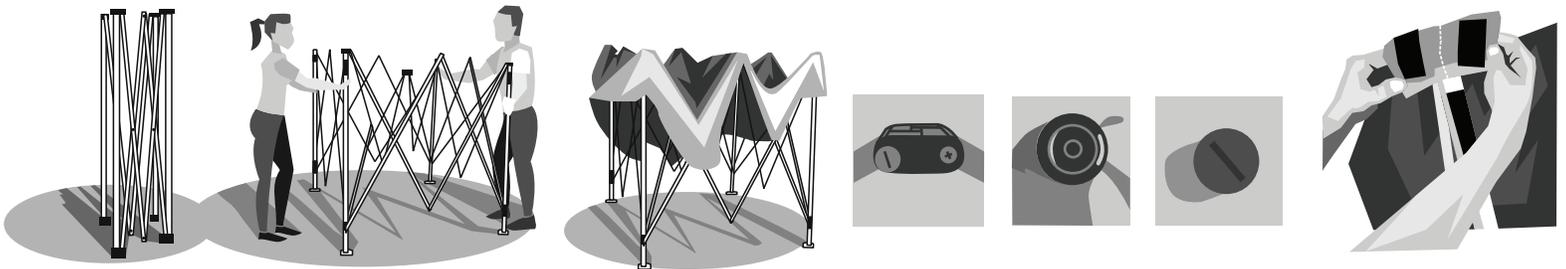


Fig. 1A

Fig. 2A

Fig. 3A

Fig. 3B

Fig. 3C

Fig. 3D

Fig. 4A

SETUP

- 1 Place the canopy in the desired location for shade. With partner standing on the opposite side of the canopy, hold the outer legs and lift slightly off the ground stepping backwards (**Fig. 1A**).
- 2 With partner hold the top and bottom of the middle of the eaves where it makes a diamond shape as pictured in (**Fig. 2A**) lifting slightly off the ground walking backward to extend the frame. **Be careful not to pinch your fingers as the frame opens!**
- 3 At the top of the leg, place one hand on the top corner pushing down and with the other hand just below the latch slider lifting up until it locks into position as pictured in (**Fig. 3A**). Repeat on other 3 legs.
- 4 With partner standing on the same side, lift outer leg to slide out inner leg until the push button clicks into place at desired height as shown (**Fig. 4A**). Repeat on opposite legs.

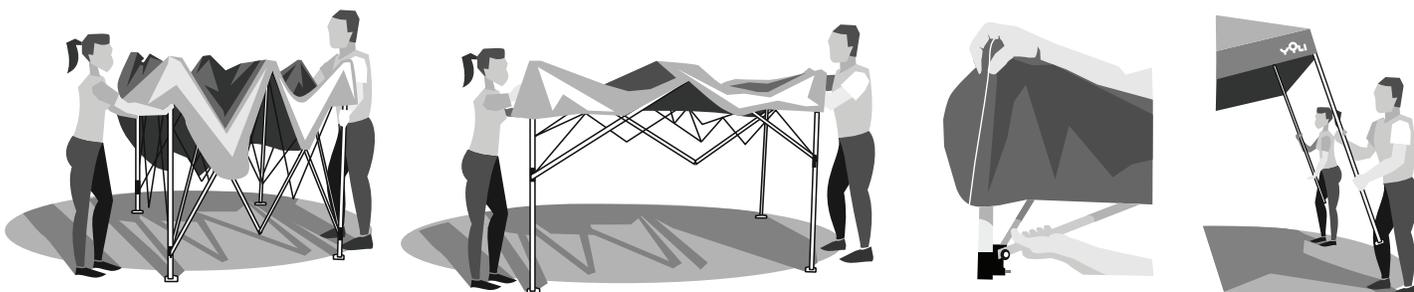


Fig. 1A

Fig. 2A

Fig. 3A

Fig. 4A

SECURING YOUR CANOPY: To harness your canopy to the ground, insert the included metal stakes into each foot corner. For additional stability, you can purchase from our Customer Support Center anchor bags custom designed to secure quickly to each leg for additional weight to secure your canopy on any surface.

TAKE DOWN

- 1** Stand on the same side as your partner. In tandem slightly lift leg and depress the push button to unlock the inner leg. Push inner leg into outer leg as shown in (Fig. 1A). Repeat on opposite legs.
- 2** At each leg push the button at latch slider to unlock the ceiling assembly as shown (Fig. 2A). **As the ceiling unlocks be careful not to pinch your fingers.** PLEASE NOTE: make sure all latch sliders are unlocked before closing the frame. Closing the canopy frame with any latch sliders locked will cause damage to the frame.
- 3** Standing opposite your partner, hold top of the eaves and slightly lift walking slowly towards each other until about ½ way closed (Fig. 3A). **Be careful not to pinch your fingers as the frame closes!** With partner hold outer legs and walk slowly towards each other until fully closed (Fig. 3B). Store Canopy in carry bag. Please see instructions below.



Fig. 1A



Fig. 2A

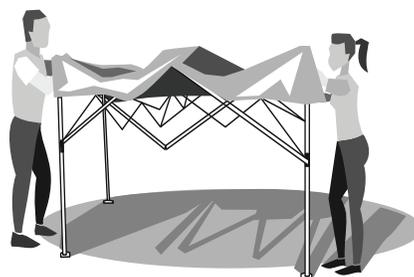


Fig. 3A

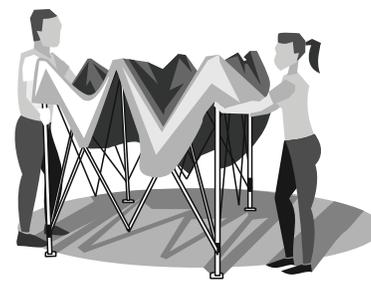


Fig. 3B

YOLI CARRY BAG INSTRUCTIONS

- 1** Close your instant canopy completely as shown in (Fig. 1A).
- 2** Unzip the carry bag from end to end. Lay out carry bag on the ground as pictured (Fig. 2A).
- 3** Place canopy in the bag with canopy legs on the same side as the wheels of the carry bag as pictured (Fig.3A & Fig.3B).
- 4** Zip carry bag shut and buckle straps as pictured in (Fig. 4A)

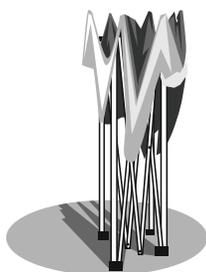


Fig. 1A

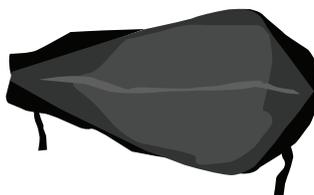


Fig. 2A

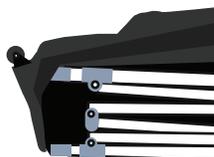


Fig. 3A



Fig. 3B



Fig. 4A

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THE FABRIC TOP. Fabric top meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric top may render the flame-resistant properties ineffective. This product contains TDCPP and/or TCEP, flame retardant chemicals known to the State of California to cause cancer.



QUESTIONS?

Email us: yoli@answernet.com.
Call us: (866) 761-0070