



THANK YOU FOR PURCHASING A YOLI INSTANT CANOPY!

Please carefully review the following instructions and familiarize yourself with parts included and how to operate your YOLI canopy. Reference parts list for names of each part noted in instructions.

ADVENTURE EASYLIFT 10'X10' 100 INSTANT CANOPY

SETUP & TAKEDOWN INSTRUCTIONS

Parts Included: Fully Assembled Frame (1) Canopy Top (1) Wall (1) Wheeled Bag (1) Stakes (4) Anchor Bags (4)

Adventure 100 can be set up and taken down with one person or two. Please see below.

SECURING THE CANOPY TOP TO THE FRAME



- 1 Place the canopy frame in the desired location (**Fig. 1A**). Position one hand on any frame leg just below the black fastening strip and place your other hand on the lower eaves bar as shown (**Fig. 1B**).
- 2 Lift the frame leg slightly off the ground so all legs except the leg directly across bearing the weight clears the ground. Take steps backwards to open the frame as much as possible (**Fig. 2A**).
- 3 Unfold the canopy top and place it over the open frame (**Fig. 3A**). Secure each corner by attaching the corner of the canopy top to the black fastening strip (**Fig. 3B**). Pull all 4 corners down until completely over black fastening strip. Your canopy top is now secure to the frame.

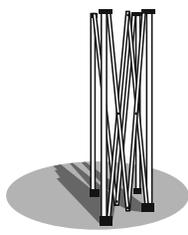


Fig. 1A



Fig. 1B

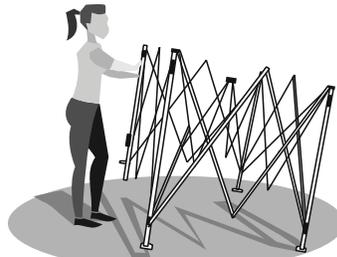


Fig. 2A

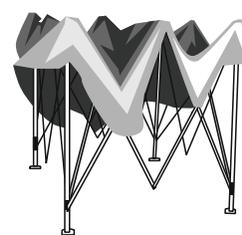


Fig. 3A



Fig. 3B

SINGLE PERSON SETUP

SINGLE PERSON CANOPY SETUP

- 1 Place the canopy in the desired location for shade. Position one hand on any frame leg just below the black fastening strip and place your other hand on the lower eaves bar as shown (**Fig. 1A**). Lift the frame leg slightly off the ground so all legs except the leg directly across bearing the weight clears the ground. Take steps backwards to open the frame as much as possible (**Fig. 1B**).
- 2 Before proceeding, make sure canopy top is over the eaves on all 4 sides as shown in (**Fig. 2A**). Stand in the middle of the eaves between two legs and place your hands on the eaves and lift to gain entrance to the underside of the canopy (**Fig. 2B**). Once underneath, place your hand on the black center hub as shown in (**Fig. 2C**) and push up twisting the hub a ¼ turn clockwise to lock in the frame.
- 3 Each leg has 3 height adjustments. Lift outer leg up and slide out the inner leg to desired height (**Fig. 3A**). Repeat for other 3 legs.
- 4 Attach wall to canopy if desired by fastening wall straps around the legs of the frame as pictured (**Fig. 4A**).



Fig. 1A



Fig. 1B



Fig. 2A

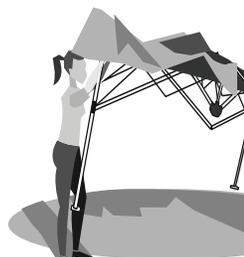


Fig. 2B



Fig. 2C



Fig. 3A

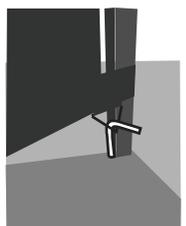


Fig. 4A

SECURING YOUR CANOPY: To harness your canopy to the ground, insert the included metal stakes into each foot corner. For additional stability, fill anchor bags with sand, dirt or small rocks (with no sharp edges) and attach to each leg for additional weight to secure your canopy on any surface as shown in (Fig. 1).



Fig. 1

SINGLE PERSON TAKE DOWN

- 1 If wall is attached, remove by unfastening wall straps around frame legs.
- 2 Slightly lift a leg and depress the chrome button to unlock the inner leg and telescope into the outer leg as shown (Fig. 2A). Repeat by lowering the leg on same side resulting in one low side and one high side as shown (Fig 2B).
- 3 Go underneath the high side of the canopy to turn the hub ¼ turn counter clockwise to unlock the frame as shown (Fig 3A). Walk back out and lower the other two legs as you did in step 2.
- 4 Position one hand on any frame leg just below the black fastening strip and lift slightly off the ground walking towards the opposite leg corner to fold the canopy frame as shown (Fig. 4A). **Be careful not to pinch your fingers as the frame closes.** Store Canopy in wheeled carry bag. Please see instructions below.



Fig. 2A



Fig. 2B



Fig. 3A



Fig. 4A

SECURING THE CANOPY TOP TO THE FRAME

- 1 Place the canopy frame in the desired location (Fig. 1A).
- 2 With partner, stand on opposite side of the frame. While holding the legs lift slightly off the ground taking a few steps backwards to extend frame at full arm's length as shown (Fig. 2A)
- 3 Unfold the canopy top and place it over the open frame (Fig. 3A). Secure each corner by attaching the corner of the canopy top to the black fastening strip (Fig. 3B). Pull all 4 corners down until completely over black fastening strip. Your canopy top is now secure to the frame.

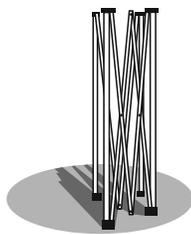


Fig. 1A

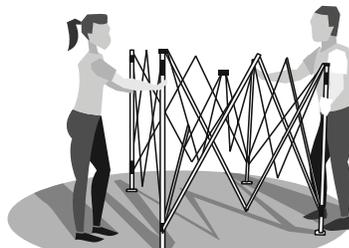


Fig. 2A

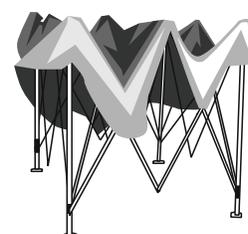


Fig. 3A



Fig. 3B

TWO PERSON CANOPY SETUP

- 1 Place the canopy in the desired location for shade. With partner standing on the opposite side of the canopy, hold the outer legs and lift slightly off the ground stepping backwards (Fig. 1A). With partner hold the top and bottom of the eaves as pictured in (Fig. 1B) lifting slightly off the ground walking backward to extend the frame.



- 2 Before proceeding, make sure canopy top is over the eaves on all 4 sides. With partner standing on the same side, extend inner leg from outer leg resulting in one low side and one high side as shown (Fig 2A). One person walks underneath high side placing their hand on the black center hub as shown (Fig 2B) and pushes up twisting the hub ¼ turn clockwise to lock in the frame.
- 3 With partner standing on the low side, slightly lift outer leg up and slide out the inner leg to desired height so all 4 inner legs are extended.
- 4 Attach wall to canopy if desired by fastening wall straps around the legs of the frame as pictured (Fig. 4A).



Fig. 1A

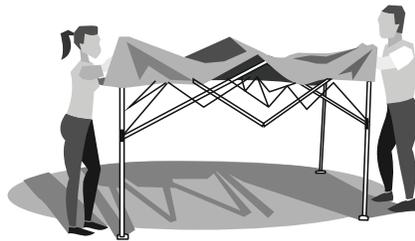


Fig. 1B



Fig. 2A



Fig. 2B

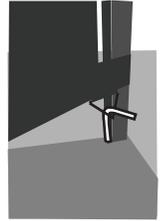


Fig. 4A

SECURING YOUR CANOPY: To harness your canopy to the ground, insert the included metal stakes into each foot corner. For additional stability, fill anchor bags with sand, dirt or small rocks (with no sharp edges) and attach to each leg for additional weight to secure your canopy on any surface as shown in (Fig. 1).



Fig. 1

TWO PERSON TAKE DOWN

- 1 If wall is attached, remove wall by unfastening wall straps around frame legs.
- 2 Stand on the same side as your partner and both slightly lift a leg in tandem and depress the chrome button to unlock the inner leg and telescope into the outer leg as shown (Fig 2A). This will result in one low side and one high side as shown (Fig. 2B).
- 3 One person goes underneath the high side of the canopy to turn the hub ¼ turn counter clockwise to unlock the frame as shown (Fig 3A). Walk back out and lower the other two legs with your partner as you did in step 2.
- 4 Standing opposite from your partner hold top of the eaves and slightly lift walking slowly towards each other until about ½ way closed (Fig. 4A). **Be careful not to pinch your fingers as the frame closes!** With partner hold outer legs and walk slowly towards each other until fully closed (Fig. 4B). Store Canopy in carry bag. Please see instructions.



Fig. 2A



Fig. 2B



Fig. 3A

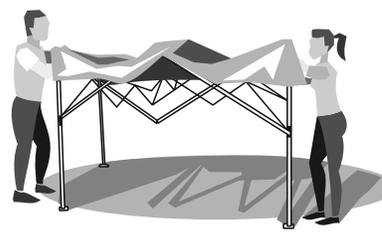


Fig. 4A

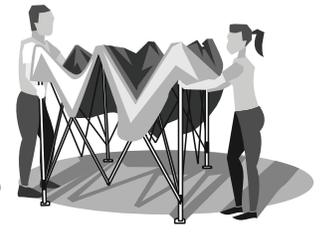


Fig. 4B

YOLI CARRY BAG INSTRUCTIONS

- 1** Close your instant canopy completely as shown in **(Fig. 1A)**.
- 2** Unzip the carry bag at end and place open end of carry bag over the top of the canopy **(Fig. 2A)**.
- 3** Slide carry bag down until the canopy is completely covered.
Flip the bag on opposite end to close bag and zipper shut. **(Fig. 3A)**.



Fig. 1A



Fig. 2A



Fig. 3A

QUESTIONS?

Email us: yoli@answernet.com.
Call us: (866) 761-0070

WARNING! KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THE FABRIC TOP.
Fabric top meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric top may render the flame-resistant properties ineffective. This product contains TDCPP and/or TCEP, flame retardant chemicals known to the State of California to cause cancer.

© East Resource Outdoor Inc. All Rights Reserved.

